SIEMENS 7712



ISO 9001



Flame Detectors

QRA...

The flame detectors are designed for use with Siemens burner controls, for the supervision of gas and oil flames.

The QRA... and this Data Sheet are intended for use by OEMs which integrate the flame detectors in their products.

Use

The flame detectors are used for the supervision of gas flames, yellow- or blue-burning oil flames and for ignition spark proving.

Type reference	For use with burner control type	Operating mode
QRA2, QRA10	LGB2 / LGB4 with AGQ1	Intermittent
	LFL	
	LFE1	
	LFE10	
	LMG with AGQ2	
QRA53, QRA55	LGK16	Continuous
	LGI16	

Warning notes



To avoid injury to persons, damage to property or the environment, the following warning notes should be observed!

- Before performing any wiring changes in the connection area of the detector, completely isolate the equipment from the mains supply (all-polar disconnection)
- Ensure protection against electric shock hazard by providing adequate protection for the terminals
- Check wiring and all safety functions
- Halogen lamps, welding equipment, special lamps or ignition sparks may produce sufficient radiation for the detector's UV cell to ignite. X-rays and gamma radiation can also generate erroneous flame signals

Mounting notes

• Ensure that the relevant national safety regulations are complied with

Installation notes

- Installation work must be carried out by qualified staff
- Observe the permissible lengths of the detector cable (refer to «Technical data»)
- Always run the ignition cables separate while observing the greatest possible distance to the detector and to other cables


Electrical connection of the flame detector

It is important to achieve practically disturbance- and loss-free signal transmission:

- Never run the detector cable together with other cables
 - Line capacitance reduces the magnitude of the flame signal
 - Use a separate cable

- · Commissioning and maintenance work must be carried out by qualified staff
- Trouble-free burner operation is ensured only when the intensity of UV radiation at the detector's location is high enough for the detector's UV cell to ignite during each half wave. The intensity of UV radiation at the detector's location is checked through measurement of the detector current


Measuring circuit for QRA2..., QRA10... and QRA5...of the D-series

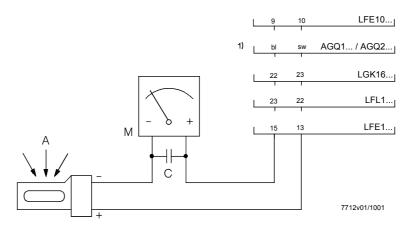

Legend

- 1) Connection of microammeter across adapter AGQ1... / AGQ2... and flame detector
- A Incidence of radiation
- M Microammeter (DC), internal resistance \leq 5000 Ω
- C Electrolytic capacitor 100...470 μF, DC 10...25 V

Measuring circuit for QRA5... up to the C-series

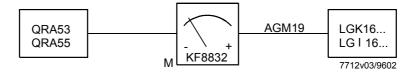

Minimum detector current values required:

Refer to the Data Sheet of the relevant burner control or to the Operating Instructions of the KF8832.

Disposal notes



The flame detector contains electrical and electronic components and may not be disposed of together with household garbage.

Local and currently valid legislation must be observed.

Mechanical design

Flame detectors QRA2...

Plastic housing, metalized to prevent static charging caused by the air flow from the fan. For direct mounting on the burner.

The detectors can be supplied with or without securing flange and clamp (refer to «Type summary»).

Flame detectors ORA10...

Die-cast aluminium housing with a 1 in. mounting coupling (D) and a connection facility for cooling air.

The housing of this detector has a bayonet fitting which allows it to be secured either directly to the mounting coupling or to the glass holder AGG06.

The mounting coupling can be screwed to a viewing tube or to the ball head AGG07.

The Pg cable gland can be removed and replaced, if some other detector cable shall be used.

Flame detectors QRA5...

The detector's UV cell is located behind a swivelling shutter at the front end of the detector tube which is flanged to the housing.

A quartz glass window protects the tube and the shutter against dirt.

The detector's housing accommodates a stepper motor to drive the shutter and the electronics to control the shutter.

Using the adapter AGG16.C, this flame detector can be mounted either directly on the burner, on a viewing tube or on a combustion chamber viewing hole.


Plug AGM19


Plug AGM19 complete with cable for the connection of flame detectors QRA53... and QRA55...

Adapter AGG16.C

Adapter AGG16.C for QRA53..., QRA55..., made of die-cast aluminium with a 1 in. mounting coupling.

The mounting coupling (D) is attached to the housing with a bayonet fitting.

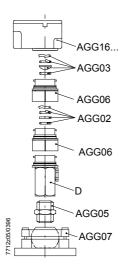

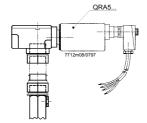

QRA5... with AGG16.C and AGG06

Note:

AGG03 or AGG02 can also be fitted in the 1 in. mounting coupling (D) of the AGG16.C (or QRA10...).

An adapter combination with glass holder AGG06, mounting coupling and ball joint for QRA53..., QRA55... and QRA10... is possible.


Glass and quartz glass lens holder AGG06

The glass and quartz glass lens holder AGG06 serves for holding the lens AGG03 and the heat insulation glass AGG02.

The lens is used to increase the sensitivity, and the heat insulation glass provides protection against high temperatures, thus extending the life of the UV cell.

The AGG06 also allows various combinations of lens, heat insulation glass and 1 in. mounting coupling.

When using the lens and the heat insulation glass, the AGG06 with the lens must be mounted as close as possible to the flame detector.

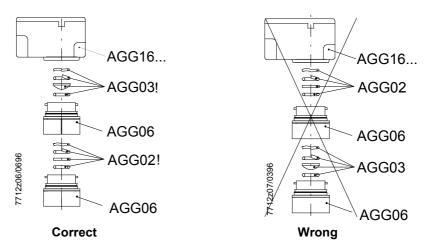

AGG06 has a bayonet fitting with which it is attached either to the housing of adapter AGG16.C or to the housing of flame detector QRA10... and the mounting coupling. By undoing the bayonet fittings on both sides, the AGG06 glass holder(s) can be easily detached from the combination of QRA10... or AGG16.C and QRA53..., QRA55....

This facilitates straightforward cleaning of the glass or lens without having to remove them from the glass holder AGG06.

The intermediate rings are used for the smooth running of the bayonet fittings, especially where – after removal of the flame detector – the hole to the combustion chamber serves as a viewing tube.

By fitting the intermediate ring to the appropriate bayonet connection, the combination can be undone where required by rotating the housing of the QRA10... or AGG16.C

Quartz glass lens AGG03 AGG03 with spring washer and O-ring for increasing the sensitivity.

Heat insulation glass AGG02

Heat insulation glass AGG02 with spring washer and O-ring, offering the same mounting choices as with the AGG03.

This heat insulation glass is required in applications where the temperature at the flame detector exceeds 80 °C.

Mounting coupling (D)

Using the bayonet fitting, the 1 in. mounting coupling can be attached either to the AGG06, the AGG16.C or the flame detector QRA10....

The mounting coupling is supplied with the QRA10... or AGG16.C.

Nipple AGG05

1 in. nipple AGG05 for connecting the mounting coupling (D) to the ball head AGG07.

Ball head AGG07

Ball head with 1 in. internal thread.

For use with the 1 in. mounting coupling and the AGG06.

The AGG07 is used for mounting on a rigid surface, such as the boiler wall.

It facilitates optimum adjustment of the viewing angle.

Flame detectors

Type reference	Sensitivity	Flange and clamp	Terminal cover	Spare UV tube
QRA2		without		
QRA2(1)	normal	with	black	4 502 1131 0
QRA2.9 ²)		without		
QRA2.9(1) ²)		with		
QRA2M	high	without	green	4 502 4065 7
QRA2M(1)		with		
QRA10.C	normal			4 502 1131 0
QRA10M.C	high			4 502 4065 7

Type reference	Sensitivity	Detector tube length	Mains voltage	Spare UV tube
QRA53.C27	normal		AC 220240 V	
QRA53.C17		125 mm	AC 100110 V	
QRA53.D27	high		AC 220240 V	
QRA53.D17			AC 100110 V	4 502 4065 7
QRA55.C27	normal		AC 220240 V	
QRA55.C17		77 mm	AC 100110 V	
QRA55.D27	high		AC 220240 V	
QRA55.D17			AC 100110 V	

Note

All QRA5... are delivered complete with clamp. Use of the detector requires a connecting cable **AGM19** (refer to «Accessories» for QRA5...).

Accessories for QRA2... and QRA5... when ordered as single items

Part	For use with	Part number
Flange 3) rounded	QRA2	4 241 8855 0
Flange straight	QRA2	4 241 8898 0
Clamp 3)	QRA2	4 199 8806 0
Clamp for direct mounting 4)	QRA5	4 199 1034 0

Accessories for QRA5...

Type reference	Description
AGG16.C	Adapter for QRA53 and QRA55
AGM19	Plug complete with 2 m cable for QRA53 and QRA55
KF8832	Unit for measuring the detector current with QRA53 and QRA55, recommended for use with detector types up to the C-series

Accessories for QRA10... and AGG16.C

Type reference	Description	
AGG02	Heat insulation glass with spring washer and O-ring	
AGG03 1)	Quartz glass lens with spring washer and O-ring	
AGG05	1 in. nipple	
AGG06	Glass and quartz glass lens holder with intermediate ring	
AGG07	Ball head with 1 in. internal thread	



Legend

- 1) For detectors of the B-series, lens AGG01 is available
- 2) With heat-resistant housing for ambient temperatures up to 200 $^{\circ}$ C (short-time, up to a few seconds)
- 3) Supplied with QRA2...(1) types
- 4) Supplied with QRA5... types

When ordering, please give type references according to «Type summary».

Technical data

General detector data	Average life of UV cell	approx. 10,000 hours at max . 50 °C, higher ambient temperatures reduce con- siderably the cell's life	
	Perm. combustion chamber pressure		
	- QRA10	max, 50 mbar	
	- QRA10 + AGG03 or AGG02	max. 500 mbar	
	Degree of protection		
	- QRA2	IP 40	
	- QRA10	IP 54	
	- QRA53, QRA55	IP 54	
	Mounting position	optional	
	Weight	·	
	- AGG01	approx. 10 g	
	- AGG02	approx. 10 g	
	- AGG03	approx. 10 g	
	- AGG05	approx. 170 g	
	- AGG06	approx. 160 g	
	- AGG07	approx. 1330 g	
	- AGG16.C	approx. 650 g	
	- QRA2	approx. 60 g	
	- QRA10	approx. 740 g	
	- QRA10 + AGG03	approx. 750 g	
	- QRA53, QRA55	approx. 900 g	
Environmental	Transport	IEC 721-3-2	
conditions	Climatic conditions	class 2K2	
	Mechanical conditions	class 2M2	
	Temperature range	-20+60 °C	
	Humidity	< 95 % r.h.	
	Operation	IEC 721-3-3	
	Climatic conditions	class 3K5	
	Mechanical conditions	class 3M2	
	Temperature range	-20+60 °C	
	Humidity	< 95 % r.h.	


Function

With this type of flame supervision, the UV radiation emitted by gas or oil flames is used to generate the flame signal.


The radiation detector consists of a UV-sensitive cell with 2 electrodes, which ignite when illuminated with radiation in the 190...270 nm range of the spectrum, thereby triggering a current in the flame detector circuit.


The UV cell does not respond to glowing firebrick in the combustion chamber, daylight or light from the boiler room illumination.

Dimensions in mm

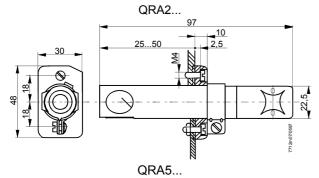




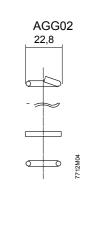

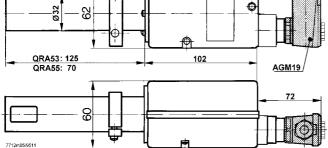

(

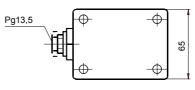


QRA10...


R1"


U٧


52 66


120

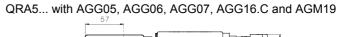

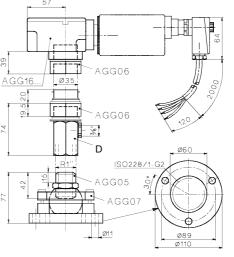

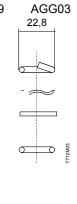

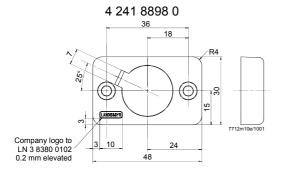

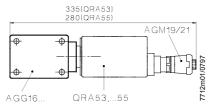

Incidence of radiation



Clamp for direct mounting on the burner or the AGG16.C



©2001 Siemens Building Technologies AG Subject to change